

# TOURRIDER

Dash Guide 06AM-J005 Rev. 0



## Driver's Dashboard and General Overview

- |                                  |                            |
|----------------------------------|----------------------------|
| 1. Instrument panel - left side  | 5. Emergency brake release |
| 2. Center instrument cluster     | 6. Steering wheel left     |
| 3. Instrument panel - right side | 7. Steering wheel right    |
| 4. 360 degree view               | 8. Lower right dash        |

### A. Instrument panel - left side




- |                                |                                                    |
|--------------------------------|----------------------------------------------------|
| 1. 12 Volt Power Inverter      | 13. Rotary headlight switch                        |
| 2. 120 Volt passenger plugs    | 14. Not Assigned                                   |
| 3. Not Assigned                | 15. Driver's side sun-shade                        |
| 4. Lavatory light on/off       | 16. Passenger's side sun-shade                     |
| 5. Reverse camera washer       | 17. Driver's window and electric mirror heat       |
| 6. Not Assigned                | 18. Not Assigned                                   |
| 7. Traction control off        | 19. Mirror Adjustment                              |
| 8. Not Assigned                | 20. Driver's power window                          |
| 9. Trailing axle load transfer | 21. DPF regen/regen block                          |
| 10. Adjustable steering column | 22. ADA power switch                               |
| 11. Horn mode selection        | 23. Emergency release switch - frequent-stop brake |
| 12. Not Assigned               |                                                    |

### B. Instrument panel - right side



1. Mirror Adjustment
2. Drivers light & SOS/loading lights
3. Reading lamps (passengers)
4. Passenger compartment lighting (stage1 and stage2)
5. Night lights
6. Luggage bay door lock/unlock
7. Luggage lights
8. Docking lights (driver side)
9. Docking lights (passenger side)
10. Ambient lighting (optional)
11. Entry door switch open/close
12. Emergency door lever reset
13. Hazard lights
14. Hold off, frequent-stop brake
15. Normal level/kneeling
16. Full bus raise/lower

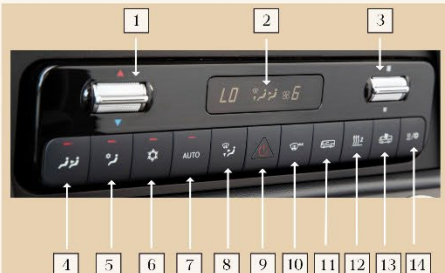

1. Temperature control
  - Red Hot
  - Blue = Cold
2. HVAC Display
  - Temperature
  - Air position
  - Fan speed
3. Fan speed adjustment
4. Button to choose cockpit or passenger compartment
  - Static red light = Drivers cockpit
  - Blinking red light = Passenger's compartment
5. Compressor On/Off
6. Air Conditioning - On/Off
7. Automatic control of temperature
8. Choice of directional air flow
9. Power button for complete HVAC
10. Defrost position set to maximum speed
11. Recirculated air switch for complete bus
12. Ignition off - Turns preheater on
  - Ignition on - Request for additional preheater assistance
13. Not Applicable
14. Reheat switch (used to dehumidify the interior of the coach)

### C. Center Instrument Cluster D. Steering wheel Controls



- |                                        |                                                 |
|----------------------------------------|-------------------------------------------------|
| 1. Dash cluster                        | 7. Radio volume control                         |
| 2. Steering wheel/horn                 | 8. Mobile phone answer/end                      |
| 3. Left steering wheel button cluster  | 9. Cruise control                               |
| 4. Right steering wheel button cluster | 10. Menu selection                              |
| 5. Menu selection                      | 11. Retarder control                            |
|                                        | 12. Blinker, windshield wiper, highbeam control |

# DAIMLER TRUCK

Daimler Buses

# TOURRIDER

Dash Guide 06AM-J005 Rev. 0



The screen (1) is a status display that shows information on operating status, functions and faults (symbols). It can also be used to access information from the on-board diagnosis utility.

- |                                              |                                                                  |
|----------------------------------------------|------------------------------------------------------------------|
| 1. Indicator lamp - Traction control/ASR     | 13. Indicator lamp - High beam headlights                        |
| 2. Indicator lamp - ABS                      | 14. Indicator lamp - Parking brake                               |
| 3. Indicator lamp - ESP                      | 15. Indicator lamp - Low beam headlights                         |
| 4. Indicator lamp - Left blinker (trailer)   | 16. Indicator lamp - emissions related error                     |
| 4a. Indicator lamp - Left blinker (trailer)  | 17. Indicator lamp - Diesel particulate filter load status fault |
| 5. Indicator lamp - Right blinker (trailer)  | 18. Indicator lamp - High exhaust temperature                    |
| 5a. Indicator lamp - Right blinker (trailer) | 19. Indicator lamp - Water in the fuel tank                      |
| 6. Tire pressure warning light               | 20. Indicator lamp - Low diesel exhaust fluid                    |
| 7. Brake pad wear warning light              | 21. Indicator lamp - Stop engine                                 |
| 8. Brake prompt                              | 22. Indicator - Check engine (yellow or red)                     |
| 9. Low fuel light                            |                                                                  |
| 10. Active brake assist - switched off       |                                                                  |
| 11. ESP - switched off                       |                                                                  |
| 12. Brake system fault warning light         |                                                                  |

## Overview of screen operation, function and fault displays

| Symbol Description                | Symbol Description               | Symbol Description               | Symbol Description                                | Symbol Description                        | Symbol Description                              | Symbol Description                             | Symbol Description                              |
|-----------------------------------|----------------------------------|----------------------------------|---------------------------------------------------|-------------------------------------------|-------------------------------------------------|------------------------------------------------|-------------------------------------------------|
| Check engine light                | Alternator 1 malfunction         | Rain sensor wiper speed stage 5  | Side guard assist warning with vibration in seat  | Engine and side flap open                 | ABS warning or fault                            | Fire Warning                                   | Seatbelt reminder                               |
| Stop engine light                 | Alternator 2 malfunction         | Max defrost                      | Side guard assist OFF                             | Engine flap open                          | Lavatory water level low                        | Transmission in reverse                        | Driver attention assist reminder                |
| Check engine light                | Alternator 3 malfunction         | Rain/light sensor malfunction    | Side guard assist warning                         | Side flap open                            | Lavatory tanks are full                         | Transmission in neutral                        | Water in the fuel                               |
| Engine air filter needs replaced  | Cruise Control                   | Preheater active                 | Side guard assist initializing                    | Roof hatch open                           | Lavatory emergency call button is being pressed | HVAC compressor active                         | Emergency window open                           |
| High exhaust temperature          | Adaptive cruise control          | Preheater fault                  | Side guard assist fault                           | Bus in raised position                    | Low fuel                                        | Driver recirculated air active                 | Collision warning                               |
| Low DEF Fluid                     | Engine oil level low             | Entry door in learning procedure | Low beam headlight malfunction                    | Front of bus currently raising            | Fuel level sensor fault                         | Passenger recirculated air active              | Tag axle air pressure unloaded                  |
| Battery Not charging              | Low oil pressure or sensor fault | ADA door open                    | Exterior light malfunction                        | Bus in lowered position                   | Air pressure is low                             | Water filling system                           | ADA lift deployed                               |
| Battery not charging alternator 1 | Engine oil level too high        | Door closing/closed              | Brake light malfunction                           | Front of bus currently lowering           | Compressed air filter maintenance required      | HVAC compressor maintenance needed             | Engine power reduced - filter needs maintenance |
| Battery not charging alternator 2 | Coolant temp to high             | Door 1 open                      | Turn signal malfunction                           | Whole coach currently raising or lowering | Tag/rear axle steering malfunction & locked     | Tire pressure monitoring system warning        | Power steering fluid low                        |
| Battery not charging alternator 3 | Coolant level low                | Door 2 open                      | High beam headlight malfunction                   | Coach leveling air pressure is low        | Tag axle steering not active                    | Traction control on/off                        | Preheater timer fault                           |
| Low battery voltage               | Windshield washer fluid low      | Door 2 locked                    | Automatic headlight sensor malfunction            | Parking brake engaged                     | Retarder is on and ready to work                | Active brake assist currently working          | Maintenance required                            |
| High battery voltage              | Rain sensor wiper speed stage 1  | Emergency air release door 1     | Front fog light malfunction                       | Parking brake air pressure is low         | Retarder currently working                      | Active brake assist off                        | Cruise control limited                          |
| Battery emergency stage 1         | Rain sensor wiper speed stage 2  | Emergency air release door 2     | Rear fog light malfunction                        | Brake wear indicator                      | Retarder active when pressing brake pedal       | Electronic stability protection active/working | Passenger stop request                          |
| Battery emergency stage 2         | Rain sensor wiper speed stage 3  | Emergency air release            | Reverse light malfunction                         | Frequent stop brake active                | Retarder off                                    | Electronic stability protection off            | High idle active                                |
| Battery emergency stage 3         | Rain sensor wiper speed stage 4  |                                  | Daytime running light or marker light malfunction | Press the brake, engine idle too high     | Ignition switch malfunction                     | ADA call and/or transmission interlock active  | Passenger requesting steward                    |



## Mercedes-Benz Tourrider Driver's Cockpit Guide Premium Coach - Bosch

This Guide shows the location and names of the controls and switches found in the driver's cockpit of the *Tourrider* - Premium coach equipped with the Bosch AV system. Please use this supplemental guide in addition to your owner's manual. If you need more assistance, please contact your employer, your local service provider, or the 24-hour service number below.

Contact your local Daimler Coaches North America team member at:

1-800-206-9728

[www.Mercedes-Benz-Bus.com](http://www.Mercedes-Benz-Bus.com)

DAIMLER TRUCK  
Daimler Buses