

TOURRIDER

Battery Maintenance

Battery Disconnect Switch

The battery disconnect switch (01S01) is located inside the battery compartment.

The battery compartment is located above the wheel arch of the trailing axle, on the left-hand side at the rear of the vehicle.

To operate the Battery, Disconnect Switch:

1. Turn the engine off.
2. Check the LED indicator light next to battery switch [1]. Ensure this light is off before continuing.
3. Turn the battery disconnect switch only when the LED next to it is not showing.

- ❑ **Note:** This light is a protective measure preventing damage to the exhaust after-treatment system.




Battery Charge Status

The charge state of the battery can be viewed with through the ICUC ("Dash Display").

1. Navigate the menu by toggling the directional arrows on left-hand side of steering wheel.
2. Tab to the right until you are on the vehicle main menu tab (identified by 'bus icon')
3. Tab down until you are on the battery submenu.
4. Displayed is the battery voltage.



- ❑ **Note:** Download AGM Truck Test App.

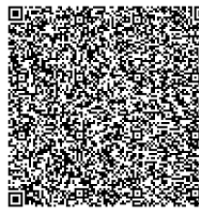


DAIMLER TRUCK

Daimler Buses

Charging Batteries

Batteries self-discharge even when not in use, so it is recommended to recharge the batteries once a month if they are not being used.

- ❑ **Caution:** Please review 'Important notes on handling batteries' in the Operator's Manual.

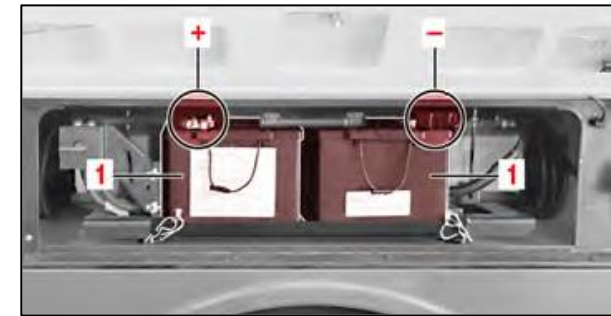

1. Connect the charger to the battery terminals, making sure that the positive and negative terminals are properly aligned.
2. Ensure that the voltage is set to 24V and that the charging current is correct. The charging current should be approximately 1/10 of the rated capacity. Switch on the charger.
3. Switch off the charger after charging has finished.
4. Disconnect the charger.

