

Cold Weather Lavatory Procedures

Critical Warning

- The automatic dump valve on this vehicle **ONLY** drains the freshwater tank.
- It **DOES NOT** drain the water trapped in the rinse lines or the brass ball valves.
- You **MUST** perform the manual valve steps below to prevent the valves from splitting.

Procedure:

Conditions: When temperatures fall below 32 °F (0 °C)

- 1. Drain the Freshwater Tank:** activate the dump switch to empty the main fresh water supply tank (**B** in the schematic/diagram).
- 2. Disconnect Water Supply:** Disconnect the external fill hose from the vehicle.
- 3. Open Rinse Service Valves (CRITICAL STEP):**
 - a) Locate the manual rinse ball valves behind the service flap (**A** and **C** in the schematic/diagram).
 - b) Turn both valves to **OPEN** position.
- 4. Gravity Drain:** Allow all residual water trapped in the lines to drain out completely.
- 5. Leave Valves Open: DO NOT** close the valves. Leave them in the **OPEN** position while the coach is parked in freezing conditions. This ensures that any remaining moisture can expand without cracking the brass housing.

