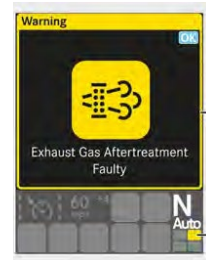
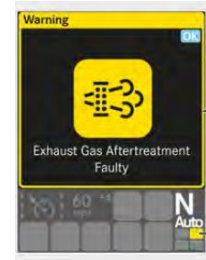
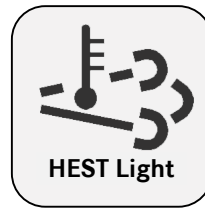


Diesel Particulate Filter (DPF) Regeneration

Premium

Business

TOURRIDER

Exhaust Aftertreatment System Information					Manual Regeneration Steps
INDICATOR LAMP(S)	Level 1	Level 2	Level 3	Level 4	 WARNING! 
	 (SOLID)	 (FLASHING)	  (FLASHING)	  	
On Board Diagnostic Message(s) or "Dash Display" Messages (ICUC)					Refer to Operator's Manual for Complete Regeneration Information. (1) Move vehicle to a suitable place away from pedestrians, other vehicles, and dry surface materials that may catch flame from heat of exhaust during regeneration. (2) Engage the parking brake by either pressing the 'P Button' or pulling back on lever and make sure vehicle is in Neutral ('N') (3) Press and hold the top section of 'DPF Regeneration Button' for 3 seconds. The High Exhaust System Temperature (HEST) light illuminates once regeneration has started.   (4) Remain with vehicle until regeneration is complete - the HEST and DPF indicators will turn off and the "Dash Display" (ICUC) will notify you process has completed.
Diesel Particulate Filter (DPF) Filter Condition	Diesel Particulate Filter: Fill Level Raised The diesel particulate filter requires regeneration	Full Diesel Particulate Filter - Start Regeneration right away	Regeneration of the diesel particulate filter is urgently required	Diesel Particulate Filter Full - Stationary regeneration is no longer possible! Have the vehicle towed to the nearest workshop	
Required Action	Bring vehicle to highway speeds to meet conditions for an Automatic Regeneration or perform a Parked Manual Regeneration	Perform a parked manual regeneration as soon as possible before risking damage and downtime.	Perform immediate parked manual regeneration before engine slows and vehicle has to be towed.	To protect vehicle from damages the vehicle at Level 4 will require a tow to a certified Detroit Diesel workshop to perform a regeneration or repairs. Demand Detroit Service QR code below. 	